

Operating Instructions

Roboterinterface Analog DPS 500

Robot Interface Analog DPS 500

DE Bedienungsanleitung

EN Operating Instructions

42,0410,1148 003-29092023

Inhaltsverzeichnis

Allgemeines	4
Sicherheit	4
Gerätekonzept	4
Anschlüsse	4
Inbetriebnahme	5
Sicherheit	5
Allgemeines	5
Interface an Robotersteuerung anschließen	5
Ein- und Ausgangssignale	7
Digitale Signale	7
Analoge Signale	8
Steuerpegel kontrollieren	9
Lichtbogen-Überwachung einstellen	10
Allgemeines	10
Schwellwert einstellen	11
Empfindlichkeit einstellen	11
Technische Daten	12
Sonderspannung	12
Technische Daten	12

Allgemeines





Anschlüsse

(1) Stecker Steuersignale digital

zum Anbinden der Schnittstelle an die Robotersteuerung

(2) **Stecker Steuersignale analog** zum Anbinden der Schnittstelle an die Robotersteuerung

(3) Stecker LHSB

zum Verbinden der beiden Stromquellen mittels LHSB Kabel (Local High Speed Bus)

(4) **Stecker LocalNet** standardisierte Anschlussbuchse für Systemerweiterungen (z.B. Fernbedienung, etc.)

(5) **Stecker Sicherheitsabschaltung** zum Verbinden der Stromquellen für die zusätzliche Sicherheitseinrichtung mittels Türkontakt

Inbetriebnahme



Belegung Steuerstecker "Digital"



Belegung Steuerstecker "Analog"

Pin A1 Eingang "Stromquelle ein"

Pin A4 Eingang "Stromquelle ein"

Die Pins A1 und A4 sind galvanisch von der Stromquelle getrennt. Sie dienen als Signalspannungs-Quelle. Somit ist es möglich z.B. das Startsignal mit einem potentialfreien Kontakt zu steuern.

Pin A5 Ausgang "Sicherheitsabschaltung" +24 V

Pin B5 Ausgang "Sicherheitsabschaltung" GND

Der Kontakt wird geöffnet, sobald die zusätzliche Sicherheitseinrichtung (Türkontakt) ausgelöst wird. Gleichzeitig schaltet die Stromquelle ab und die Anzeige "Störung" leuchtet.

Pin A2 Eingang "Stromquelle Start" +24 V

Pin C3 Eingang "Stromquelle Start" GND

Die Stromquelle erhält ein Startsignal, sobald zwischen Pin A2 und Pin C3 die Spannung von 24V anliegt.

Pin A3 Eingang "Lichtbogen-Überwachung" +24 V

Pin C3 Eingang "Lichtbogen-Überwachung" GND

Solange zwischen Pin A3 und Pin C3 die Spannung von 24V anliegt, ist die Lichtbogen-Überwachung aktiv. Tritt im Plasmaprozess ein Lichtbogen auf, schaltet die Stromquelle kurzzeitig ab. Anschließend steigt der Ausgangsstrom wieder kontinuierlich bis zum Sollwert. Dieser Vorgang wiederholt sich, sobald neuerlich ein Lichtbogen auftritt.

Pin B1 Ausgang "Prozess aktiv" +24 V

Pin B2 Ausgang "Prozess aktiv" GND

Der Kontakt wird geschlossen, sobald das Startsignal "Stromquelle Start" übernommen wurde. Unabhängig davon, ob ein Stromfluss vorhanden ist.

Pin B3 Ausgang "Stromfluss"

Pin B4 Ausgang "Stromfluss"

Der Kontakt wird geschlossen, sobald die Stromquelle Strom liefert. Die Ausgabe des Signals erfolgt mit einer Verzögerung von 0,5 Sekunden. **WICHTIG!** Das Signal ist nicht aktiv, wenn kein Verbraucher an der Stromquel-

le angeschlossen ist.

Pin C1 Ausgang "Fehler"

Pin C2 Ausgang "Fehler"

Der Kontakt wird geöffnet, sobald während des Prozesses ein Fehler auftritt. Gleichzeitig schaltet die Stromquelle ab und die Anzeige "Störung" leuchtet. Zum Quittieren des Fehlers das Startsignal unterbrechen.

Pin C4 Ausgang "Lichtbogen-Abschaltung" +24 V

Pin C5 Ausgang "Lichtbogen-Abschaltung" GND

Solange zwischen Pin A3 und Pin C3 die Spannung von 24V anliegt, ist die Lichtbogen-Überwachung aktiv. Treten die Lichtbögen im Plasmaprozess mit einer Folgefrequenz von 60 Hz oder höher auf, erfolgt eine völlige Abschaltung der Stromquelle. Die Fehlermeldung Lichtbogen-Abschaltung wird gleichzeitig über die digitale Schnittstelle an die Robotersteuerung ausgegeben.

Analoge Signale	Pin A1	Ausgang "U-Ist" 0 - 10 V	
	Pin A4	Ausgang "U-Ist" GND	
	0 V entspricht 0 V 10 V entspricht 200 V		
	Pin B1	Ausgang "I-Ist" 0 - 10 V	
	Pin B2	Ausgang "I-Ist" GND	
	0 V entsp 10 V ents	pricht 0 A pricht 100 A	
	Pin C1	Eingang "I-Soll" 0 - 10 V	
	Pin C2	Eingang "I-Soll" GND	
	0 V entsp 10 V ents	richt 0 A pricht 100 A	

SteuerpegelDie Steuerpegel können mittels Jumper auf der Platine PLI10 individuell ange-
passt werden.

VORSICHT!

Gefahr durch falsch eingestellte Steuerpegel. Dies kann zu Sachschäden an der Anlage führen

Vor Inbetriebnahme der Stromquelle sind die eingestellten Steuerpegel zu kontrollieren und gegebenenfalls anzupassen.



Position der Jumper

- (1) **Jumper I-Soll** ... Wertebereich: 0 10 V = 0 100 A
- (2) Jumper Reserve
- (3) **Jumper I-Ist** ... Wertebereich: 0 10 V = 0 100 A
- (4) **Jumper U-Ist** ... Wertebereich: 0 10 V = 0 100 A

			DPS 500	TA 150
Jumper I-Soll (1)	1 V = 2,5 A	1 V = 5 A	1 V = 10 A	1 V = 15 A
	(4 : 1)	(2 : 1)	(1 : 1)	(1 : 1,5)
Jumper Reserve (2)				
Jumper I-Ist (3)	1 V = 40A	1 V = 20 A	1 V = 10 A	1 V = 15 A
	(4 : 1)	(2 : 1)	(1 : 1)	(1 : 1,5)
Jumper U-Ist (4)	1 V = 80 V	1 V = 40 V	1 V = 20 V	1V = 15 V
	(4 : 1)	(2 : 1)	(1 : 1)	(1 : 1,33)

Jumpereinstellungen

Lichtbogen-Überwachung einstellen

Allgemeines

Schwellwert (Threshold) und Empfindlichkeit (Sensitiveness) der Lichtbogen-Überwachung können mittels Dipschalter auf der Platine PLI10 individuell angepasst werden.

WICHTIG! Die Lichtbogen-Überwachung kann im Bedarfsfall deaktiviert werden.

VORSICHT!

Gefahr durch falsch eingestellte Werte.

Dies kann zu Sachschäden an der Anlage führen

 Vor Inbetriebnahme der Stromquelle sind die eingestellten Werte zu kontrollieren und gegebenenfalls anzupassen.



Position der Dipschalter

Schwellwert ein- stellen	Bitmuster	Schwellenwert (Threshold)	Der Schwellwert (Threshold) ist ein prozentu eller Wert der aktuellen Plasmaspannung,			
	0000	10 %	 welcher ständig mit der Ausgangsspannu der Stromquelle verglichen wird. Tritt im 			
	0001	16 %	maprozess ein Lichtbogen auf, bricht die			
	0010	21 %	maspannun	g zusammen und unterschreitet		
	0011	27 %	Die Lichtbo	gen-Überwachung schaltet das		
	0100	32 %	Leistungste	il kurzzeitig ab. Anschließend		
	0101	37 %	lich bis zum	Sollwert. Dieser Vorgang wieder-		
	0110	43 %	holt sich, sc	bald neuerlich ein Lichtbogen auf-		
	0111	48 %				
	1000	53 %	Treten die L	ichtbögen im Plasmaprozess mit		
	1001	59 %	auf, erfolgt	eine völlige Abschaltung der		
	1010	64 %	Stromquell	е.		
	1011	69 %	Das Einstell	en des prozentuellen Schwellwer-		
	1100	75 %	tes erfolgt i	iber ein bestimmtes Bitmuster am		
	1101	80 %	Dipschalter "Threshold".			
	1110	85 %				
	1111	90 %				
Empfindlichkeit einstellen	Die Empfind Lichtbögen v wird.	lichkeit (Sensitivity verstreichen darf, c	/) ist ein Fakto hne dass die L	für die Zeit, welche zwischen den ichtbogen-Abschaltung ausgelöst		
	Minimale Ze	eit zwischen Lichtb	ögen = -	"Empfindlichkeit" [ms]		
				2,5		
	Je nach Frec bestimmten	juenz der nacheina Anzahl von Lichtb	nder auftreter ögen die Lichtl	nden Lichtbögen, wird nach einer Dogen-Abschaltung ausgelöst.		
	Anzahl Lich	tbögen = 3+	"Mittlere Ze	it zwischen Lichtbögen" x 50 [ms]		
				"Empfindlichkeit" [ms]		
	Die maximale Folgefrequenz der nacheinander auftretenden Lichtbögen beträgt 60 Hz. Treten die Lichtbögen im Plasmaprozess mit einer Folgefrequenz von 60 Hz oder höher auf, erfolgt eine völlige Abschaltung der Stromquelle.					
	ness". Der W	ert für die Empfin	dlichkeit entsp	richt dem eingestellten Bitmuster.		

Technische Daten

Sonderspannung

HINWEIS!

Falsch ausgelegter Netzstecker, Netzzuleitung sowie deren Absicherung kann zu schwerwiegenden Sachschäden führen. Ist das Gerät für eine Sonderspannung ausgelegt, gelten die Technischen Daten am Leistungsschild. Netzstecker, Netzzuleitung sowie deren Absicherung sind entsprechend auszulegen.

Technische Da- ten	Versorgungsspannung	24 V
	Versorgungsspannungs-Toleranz	-15 % / +20 %
	Digitale Ausgänge: Max. Schaltspannnung Max. Schaltstrom	30 V 2 Adc
	Digitale Eingänge: Eingangsspannung Eingangsstrom	18 - 36 V 8,3 mA (24 V)
	Analoge Ausgänge: Ausgangsspannung Max. Ausgangsstrom	0 - 10 V 100 µA
	Analoge Eingänge: Eingangsspannung Max. Eingangsstrom	0 - 10 V 102 µA (10 V)
	Luftverbrauch	7 l/s
	Schutzart	IP 23
	Abmessungen l/b/h	180/310/190 mm
	Prüfzeichen	CE

Contents

General	14
Safety	14
Appliance concept	14
Connections	14
Start-up	15
Safety	15
General remarks	15
Connecting up the interface to the robot control	15
Input and output signals	17
Digital signals	17
Analogue signals	18
Checking the control levels	19
Adjusting the arc-monitoring feature	20
General remarks	20
Setting the threshold value	21
Setting the sensitivity	21
Technical data	22
Special voltages	22
Technical data	22

General



Connections

(1) Digital control-signal plug

for connecting the interface to the robot control

(2) Analogue control-signal plug

for connecting the interface to the robot control

(3) LHSB plug

for linking the two power sources using an LHSB (Local High Speed Bus) cable

(4) LocalNet plug

standardised connection jack for system add-ons (e.g. remote-control units etc.)

(5) Safety cut-out plug

for linking up the power sources for the extra safety feature using a doorcontact

Start-up



Pin configuration on the "Digital" control plug

15



Pin configuration on the "Analogue" control plug

Digital signals

Pin A1 Input: "Power source ON"

Pin A4 Input: "Power source ON"

Pins A1 and A4 are galvanically isolated from the power source and serve as a signal- voltage source. This makes it possible to e.g. control the start-up signal with a floating contact.

Pin A5 Output: "Safety cut-out" +24 V

Pin B5 Output "Safety cut-out" GND

The contact is opened as soon as the extra safety feature (door contact) is triggered. At the same time, the power source cuts out and the "Malfunction" indicator lights up.

Pin A2 Input: "Power source START" +24 V

Pin C3 Input: "Power source START" GND

The power source receives a start-up signal as soon as the 24V voltage is applied between Pin A2 and Pin C3.

Pin A3 Input: "Arc monitoring" +24 V

Pin C3 Input: "Arc monitoring" GND

As long as the 24V voltage is applied between Pin A3 and Pin C3, arc-monitoring is active. If an arc occurs in the plasma process, the power source will momentarily cut out. After this, the output current once more climbs continuously, until it reaches the command value. This process is repeated as soon as another arc occurs.

Pin B1 Output: "Process ACTIVE" +24 V

Pin B2 Output: "Process ACTIVE" GND

The contact is closed as soon as the start-up signal "Power source START" has been transferred - regardless of whether current is flowing or not.

Pin B3 Output: "Current-flow"

Pin B4 Output: "Current-flow"

The contact is closed as soon as the power source starts delivering current. The signal is outputted after a 0.5-second time-lag.

IMPORTANT! The signal is not active if no consumer is connected to the power source.

Pin C1 Output "Error"

Pin C2 Output "Error"

The contact is opened as soon as any error occurs during the process. At the same time, the power source cuts out and the "Malfunction" indicator lights up. To dismiss the error, interrupt the start-up signal.

Pin C4 Output: "Arc cut-out" +24 V

Pin C5 Output: "Arc cut-out" GND

As long as the 24V voltage is applied between Pin A3 and Pin C3, arc-monitoring is active. If the arcs occur in the plasma process with a repetition frequency of 60 Hz or higher, a complete shut-down of the power source takes place. At the same time, the "Arc cut-out" error message is outputted to the robot control via the digital interface.

Analogue signals	Pin A1	Output: "U-act" 0 - 10 V
	Pin A4	Output: "U-act" GND
	0 V corres 10 V corre	sponds to 0 V esponds to 200 V
	Pin B1	Output: "I-act" 0 - 10 V
	Pin B2	Output: "I-act" GND
	0 V corres 10 V corre	sponds to 0 A esponds to 100 A
	Pin C1	Input: "I-des" 0 - 10 V
	Pin C2	Input: "I-des" GND
	0 V corres 10 V corre	sponds to 0 A esponds to 100 A

Checking the control levels

The control levels can be individually adjusted by means of the jumpers on circuit-board PLI10.

CAUTION!

Danger due to incorrectly adjusted control-levels. This can result in damage to the installation.

Before the power source is put into service, the control-levels that have been set must be checked and adjusted if necessary.



Position of jumpers

- (1) **I-des jumper** ... Range of values: 0 10 V = 0 100 A
- (2) Spare jumper
- (3) **I-act jumper** ... Range of values: 0 10 V = 0 100 A
- (4) **U-act jumper** ... Range of values: 0 10 V = 0 -200 V

			DPS 500	TA 150
I-des jumper (1)	1 V = 2.5 A	1 V = 5 A	1 V = 10 A	1 V = 15 A
	(4 : 1)	(2 : 1)	(1 : 1)	(1 : 1.5)
Spare jumper (2)				
I-act jumper (3)	1 V = 40A	1 V = 20 A	1 V = 10 A	1 V = 15 A
	(4 : 1)	(2 : 1)	(1 : 1)	(1 : 1.5)
U-act jumper (4)	1 V = 80 V	1 V = 40 V	1 V = 20 V	1V = 15 V
	(4 : 1)	(2 : 1)	(1 : 1)	(1 : 1.33)

Jumper settings

Adjusting the arc-monitoring feature

General remarks The threshold value and sensitivity of arc-monitoring can be individually adjusted using the Dip switches on circuit-board PLI10.

IMPORTANT! If necessary, the arc-monitoring feature can be deactivated.

▲ CAUTION!

Danger due to incorrectly adjusted values.

This can result in damage to the installation.

Before the power source is put into service, the values that have been set must be checked and adjusted if necessary.



Position of the Dip switches

Setting the threshold value

Bit pattern	Threshold value
0000	10 %
0001	16 %
0010	21 %
0011	27 %
0100	32 %
0101	37 %
0110	43 %
0111	48 %
1000	53 %
1001	59 %
1010	64 %
1011	69 %
1100	75 %
1101	80 %
1110	85 %
1111	90 %

The threshold value is a percentage of the instantaneous plasma voltage; it is constantly compared with the output voltage of the power source. If an arc occurs in the plasma process, the plasma voltage breaks down and abruptly undershoots the pre-set threshold value. The arc-monitoring feature briefly switches off the power module. After this, the output current once more climbs continuously, until it reaches the command value. This process is repeated as soon as another arc occurs.

If the arcs occur in the plasma process with a repetition frequency of 60 Hz or higher, a complete shut-down of the power source takes place.

The percentage threshold value is set by way of a certain bit pattern on the "Threshold" Dip switch.

Setting the sensitivity

The sensitivity is a factor for the time which is allowed to elapse between the arcs without the arc cut-out being triggered.

Minimum time between arcs

= "Sensitivity" [ms] 2.5

Depending on the frequency with which successive arcs occur, the arc cut-out is triggered after a certain number of of arcs.

Number of arcs = 3 + "Mean time between arcs" x 50 [ms]s] "Sensitivity" [ms]

The maximum repetition frequency for consecutive arcs is 60 Hz. If the arcs occur in the plasma process with a repetition frequency of 60 Hz or higher, a complete shut-down of the power source takes place.

IMPORTANT! The sensitivity is set on the Dip switch labelled "Sensitiveness". The sensitivity value is defined by the particular bit pattern that has been set.

Technical data

Special voltages

NOTE!

Incorrectly rated mains plugs, mains leads or fuses can result in serious damage. If the device is designed for a special voltage, the technical data on the rating plate apply. The mains plug, mains lead and their fuse protection must be rated accordingly.

Technical data

Supply voltage	24 V
Supply-voltage tolerance	-15 % / +20 %
Digital outputs: Max. switching voltage Max. switching current 2 Adc	30 V 2 Adc
Digital inputs: Input voltage Input current	18 - 36 V 8.3 mA (24 V)
Analogue outputs: Output voltage Max. output current	0 - 10 V 100 µA
Analogue inputs: Input voltage Max. input current	0 - 10 V 102 µA (10 V)
Degree of protection	7 l/s
Degree of protection	IP 23
Dimensions L x W x H	180 x 310 x 190 mm
Mark of conformity	CE

EN



Fronius International GmbH

Froniusstraße 1 4643 Pettenbach Austria contact@fronius.com www.fronius.com

At <u>www.fronius.com/contact</u> you will find the contact details of all Fronius subsidiaries and Sales & Service Partners.